



Ultimate 64 guide to get and install the needed system files


1. first copy the needed ROM files (basic, chargen and kernal) from the Vice „C64“ directory to your memory stick:

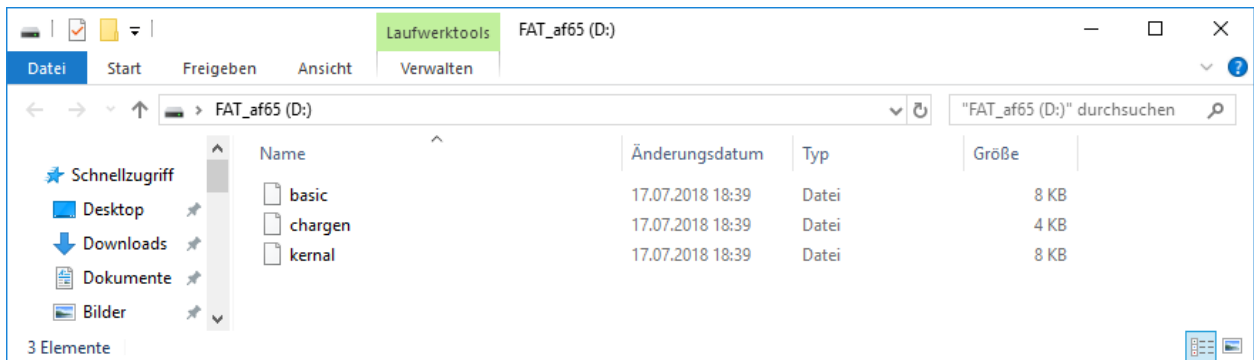

2. rename the three files to basic.rom, chargen.rom and kernal.rom (the extension might be „.rom“ or „.bin“, doesn't matter):

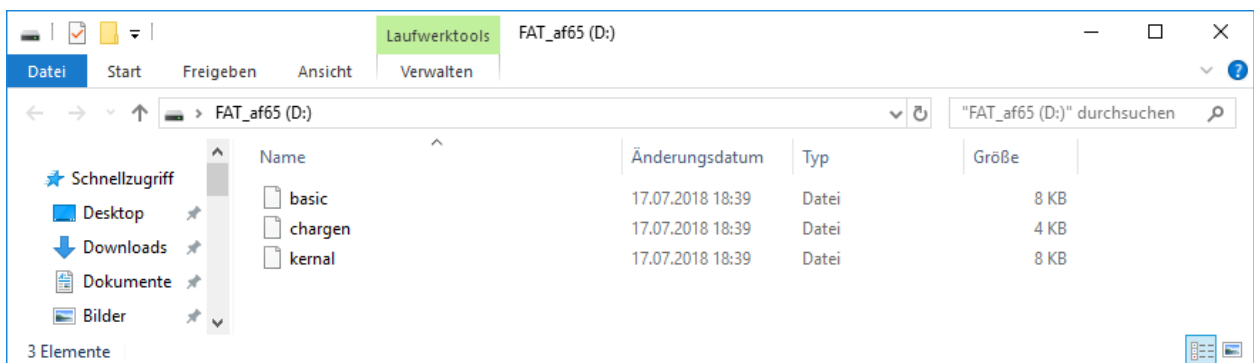


3. plug the memory stick to one of the free USB ports of your U64 and switch on. Your new U64 will welcome you with the following screen:

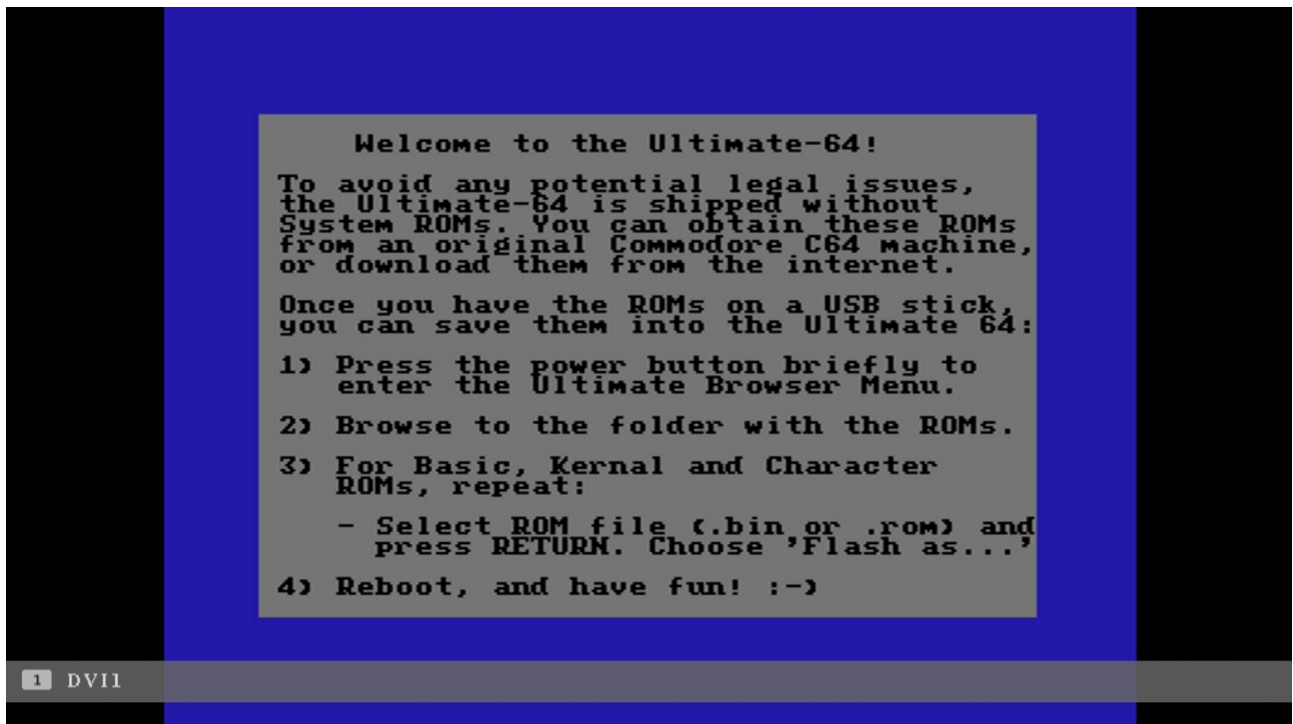

4. please shortly press the U64 button, so the following menu will appear:




5. next press CRSR RIGHT on the U64 keyboard, to enter the memory stick directory:

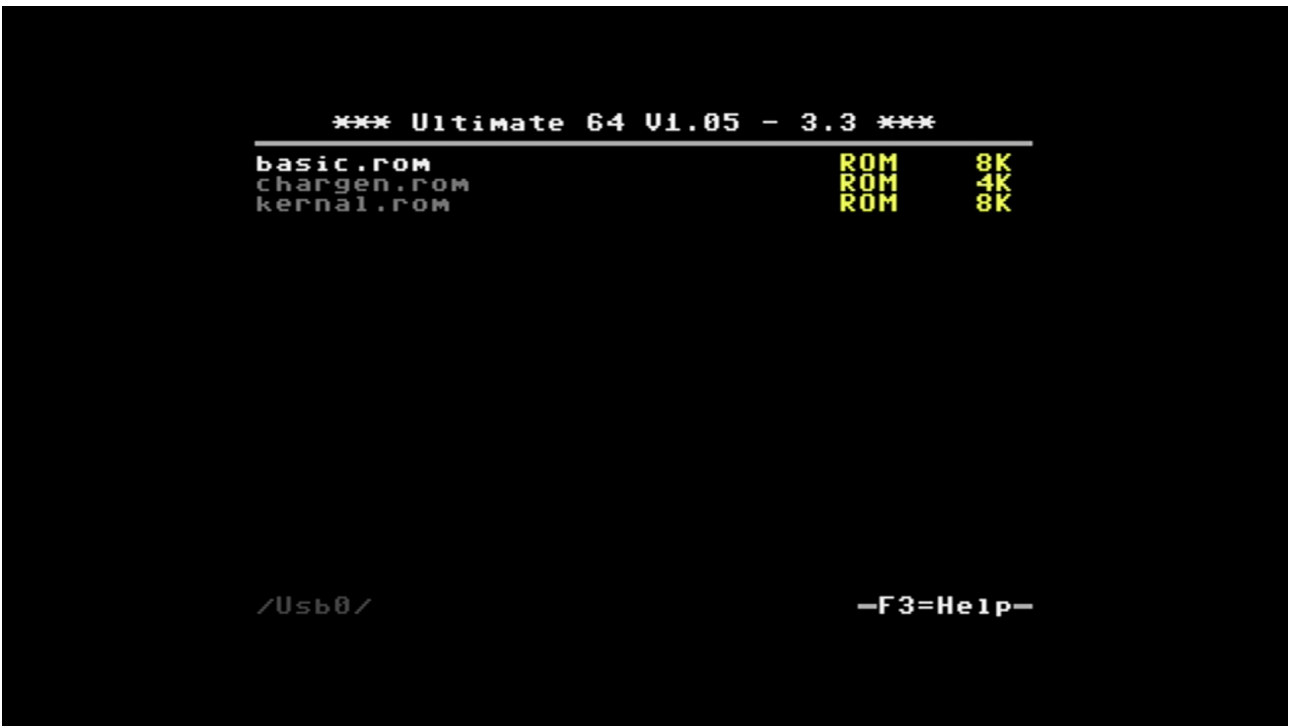

6. first select BASIC.ROM (with the RETURN key) - and select "Flash as Orig. BASIC ROM":



7. next affirm the "System ROM flashed" message again with the „RETURN“ key (the screenshot doesn't really match, as it is taken from the Kernal flash steps, but the messages are nearly the same for all three steps):

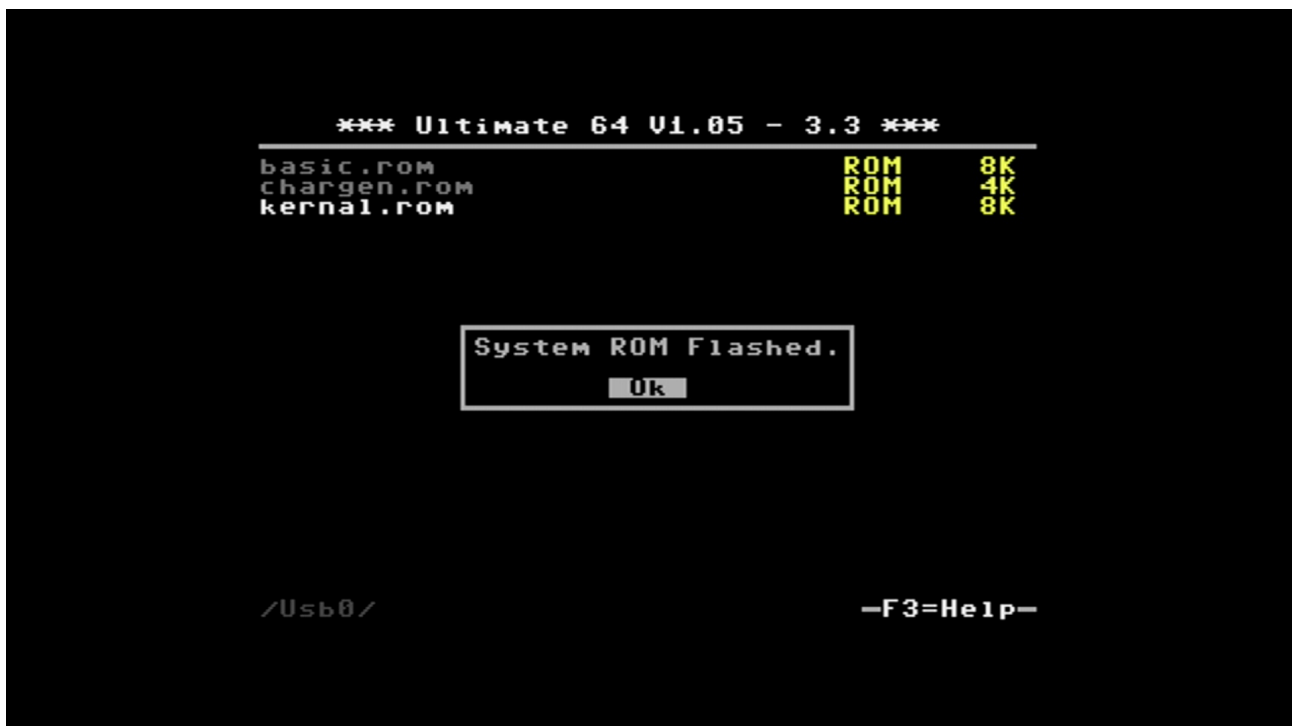


8. next select „CHARGEN.ROM" and "Flash as Orig. Char ROM". Again affirm "System ROM flashed" with RETURN.




9. as third system file, select "KERNAL.ROM" and "Flash as Orig. KernalROM". Also again affirm "System ROM flashed".




10. you now should have installed all needed system files to your U64. To check the correct settings, please press "F2" in the following menu:

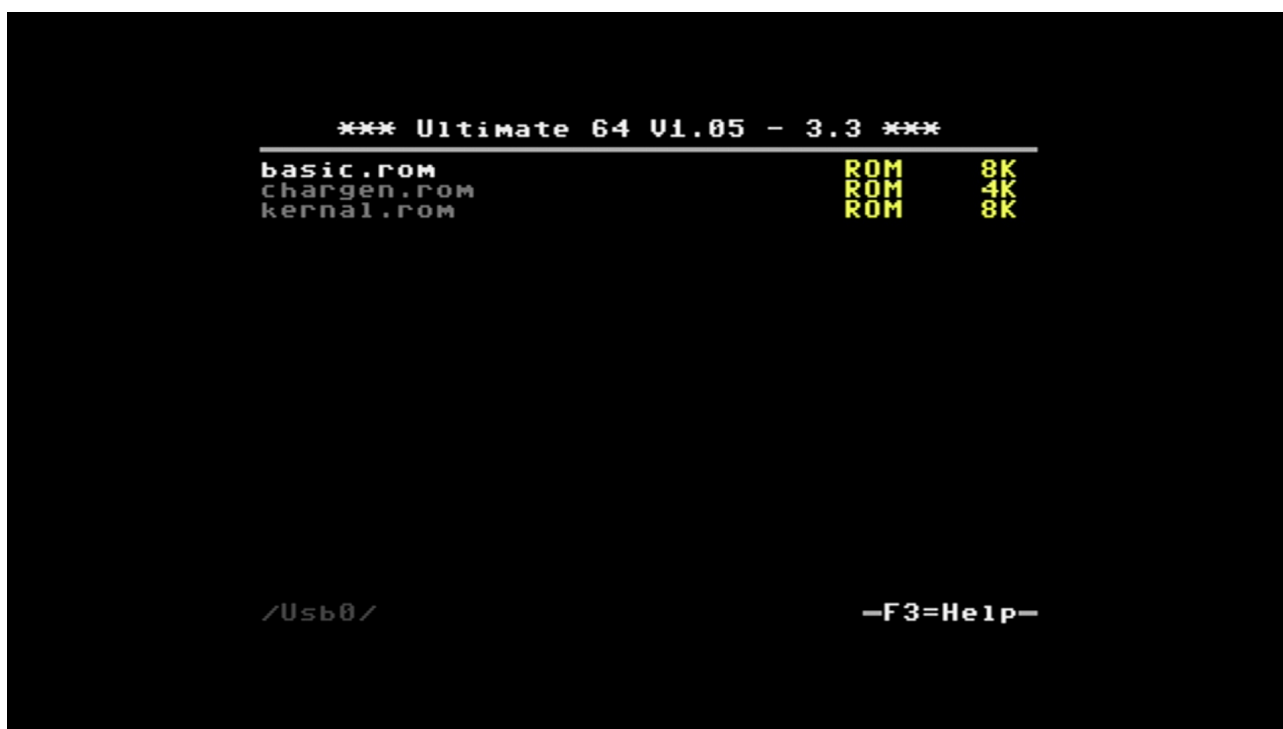

11. now select "C64 and cartridge settings" and press RETURN:

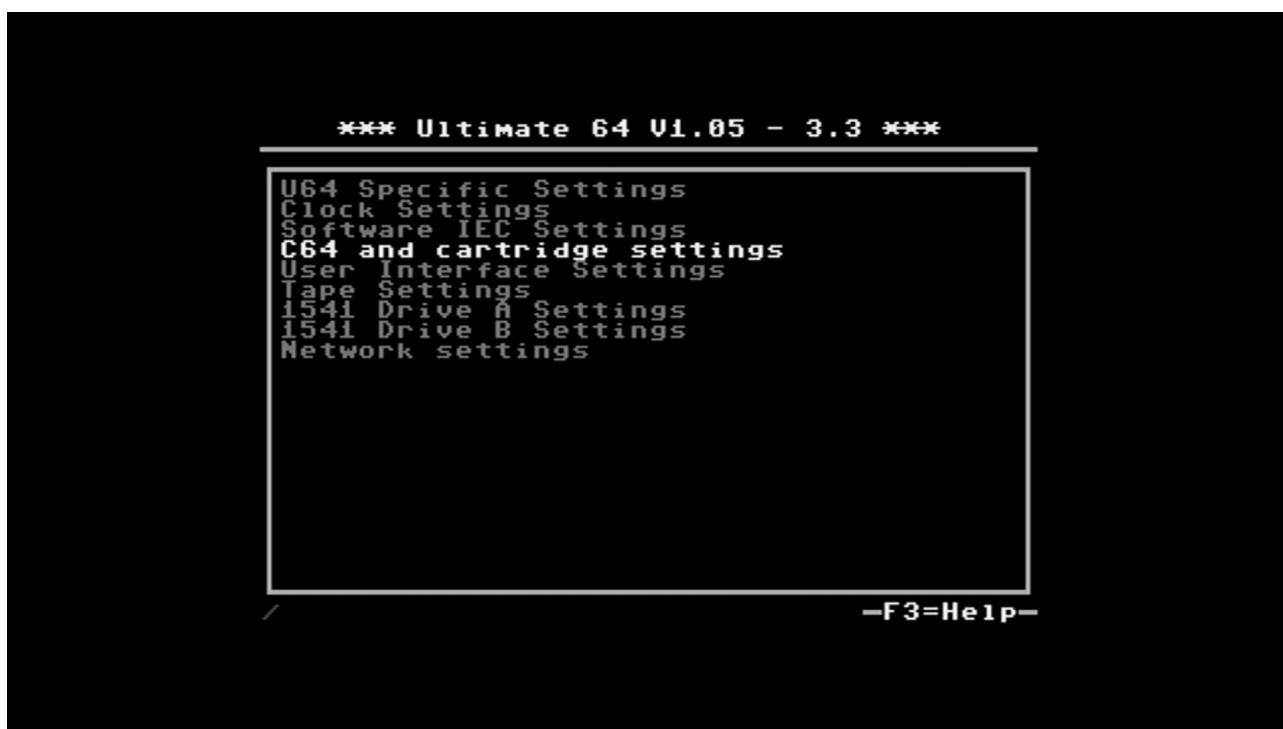

12. Kernal, BASIC & Chargen should be set to „Original“:

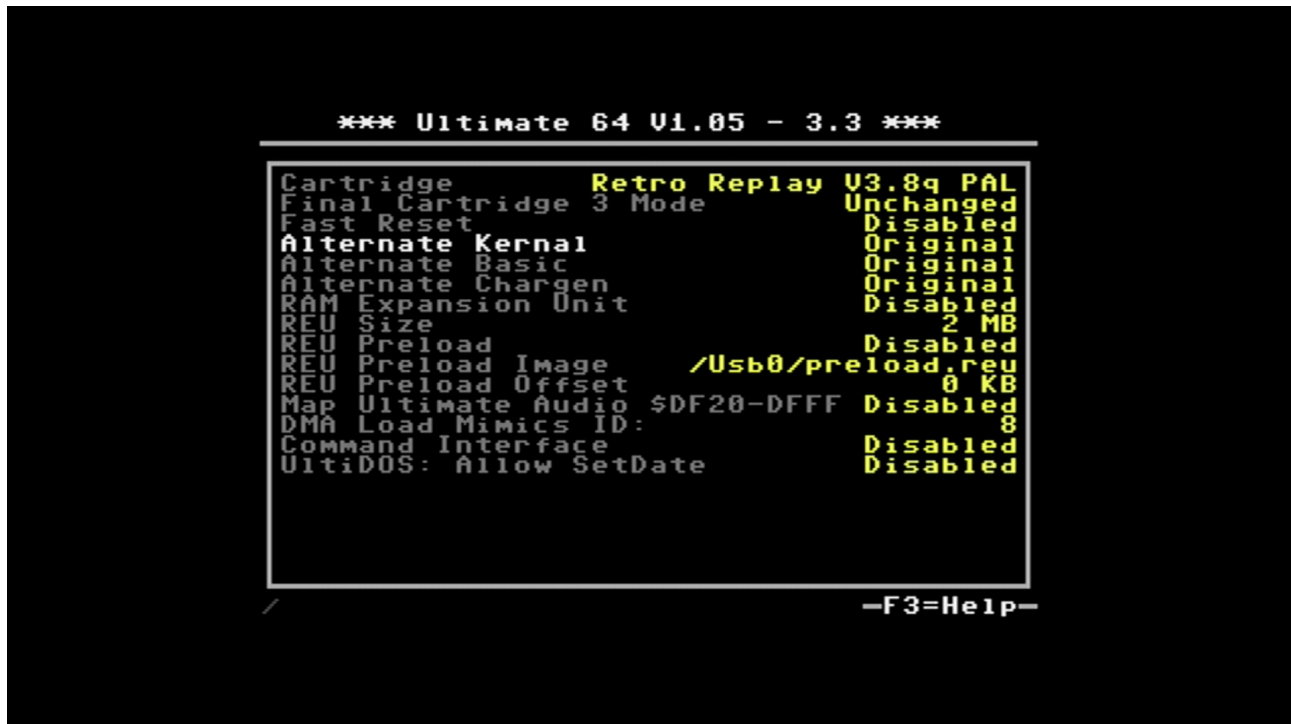

13. leave the previous menu with „RUN/STOP“ and return to the memory stick directory. To reboot your Ultimate 64 and start with the previously installed system files, please press the „F5“ key and select „Reboot U64“. Now it should start with the known light blue screen! Have fun.